



No.	Name
-----	------

- |   |                                    |
|---|------------------------------------|
| ① | EP record adaptor                  |
| ② | Turntable base                     |
| ③ | Turntable mat (Or disc slip sheet) |
| ④ | Turntable                          |
| ⑤ | Center spindle                     |
| ⑥ | Strobe mirrors                     |
| ⑦ | Power switch (power)               |
| ⑧ | Strobe light, pilot lamp           |
| ⑨ | Start-stop button (start-stop)     |
| ⑩ | Speed select buttons (33, 45)      |
| ⑪ | Shell stand                        |
| ⑫ | Arm-height control                 |
| ⑬ | Balance weight                     |
| ⑭ | Stylus pressure control            |
| ⑮ | Arm lock                           |
| ⑯ | Anti-skating control               |
| ⑰ | Cue lever                          |
| ⑱ | Arm clamp                          |
| ⑲ | Arm rest                           |
| ⑳ | Tone arm                           |
| ㉑ | Pitch indicator                    |
| ㉒ | Pitch control (pitch adj.)         |
| ㉓ | Reset button (reset)               |
| ㉔ | Locking nut                        |
| ㉕ | Head shell                         |
| ㉖ | Stylus light switch                |
| ㉗ | Stylus light                       |